

Leveloader Connected to a Direct Read Wellhead:



If you have deployed your Levelogger using Direct Read Cable deployment, use a Direct Read Connector Cable to program, view real-time readings or download data in the field.

Leveloader Connected directly to a Levelogger:



If you have deployed your Levelogger using wireline/cord deployment, remove your Levelogger from the well, and program, view or download data in the field using an Optical Connector Cable.

Downloading Levelogger Data to your Laptop or Desktop PC:



You can download Levelogger readings from your Leveloader to your desktop or laptop PC, using a USB or RS232 Communication Cable and Levelogger Software. You can also create and save up to 10 customized Levelogger settings files for transfer to Leveloggers in the field.



The Leveloader Assembly comes with Leveloader, USB and RS232 PC Communication Cables, Optical Connector, and Direct Read Connector. (Levelogger and Direct Read Cable not included).