

pH, pH/ISE, EC/TDS and DO









New Quick Connect Probes (HI98190, HI98192 and HI98193 only)

Benchtop Performance in a Portable Meter

The HI9819X series of meters combine all of the features of a benchtop into a portable IP67 rated waterproof enclosure making them one of the most versatile meters on the market.

All meters in the series are supplied with a rugged, custom carrying case that securely holds the meter and all accessories.

A backlit, graphic LCD provides easy to read resolution even in low-lit areas. A combination of dedicated and soft keys allows for intuitive operation in a choice of languages while the extended battery life assures long operation.

GLP and On-Screen Help

Comprehensive GLP data is directly accessible by pressing the GLP key; the contextual help menu can be accessed to obtain on-screen information and assistance at the touch of a button.

AutoHold

Pressing AutoHold during measurement will automatically hold the first stable reading on the display.

Enhanced Calibration

An "out of calibration range" warning can be engaged to keep the user informed of the current calibration and help to avoid performing measurements that are out of range.

HI9819X Series Professional Waterproof Meters Overview



Series Features

• Designed for professionals

 These instruments can be easily operated with one hand and is housed in an IP67 rated waterproof, rugged enclosure. The meter and accessories all fit in our rugged, custom thermoformed carrying case.

- Clear display
- Dot matrix display with multifunction virtual keys

AutoHold

 Automatically holds the first stable reading on the display

Calibration timeout

Alerts when calibration is due at a specified interval

Connectivity

 PC connectivity via opto-isolated micro-USB with HI92000 software GLP data provides data from previous calibration to ensure Good Laboratory Practices are met

· Intuitive keypad

 Most of the available options such as GLP information, help, range, calibration and backlight have a dedicated button

Supplied complete

 Each meter is supplied complete with sensor, calibration solution, beakers, PC software and connection cable, instruction manual, quick start guide and batteries in a rugged, custom carrying case.

On-screen Features




Backlit LCD

Press the backlight button to view the display in low-light conditions

Buffer[pH]
8.00%
4.01
7.01
7.

• GLP data

 Comprehensive GLP functions are directly accessible by pressing the GLP key.
Calibration data, including date, time and calibration values are stored for retrieval at a later time.

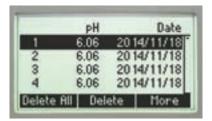

• Log-on-demand

 Store measurement data at the press of a button. Data can be viewed on-screen or transferred to a PC.



Setup screen

 Our extensive setup screen features a host of configurable options such as time, date, temperature units and language for help screens and guides.



• Calibrate right in the case with custom beaker holders

• Our custom carrying case features beaker holders for calibration out in the field.



- Extensive choice of units to display readings (ppm, ppt, g/L, µg/L, mg/L, M, mol/L, mmol/L, %, w/v, user)
- CAL Check™
 - Alerts users to problems during calibration including dirty/broken electrode, contaminated buffer and overall probe condition
- Automatic or manual temperature compensation
 - pH sensors incorporate a built-in temperature sensor
- Calibration
 - Up to a five-point calibration with seven standard buffers and five custom buffers available
- · Approximately 200 hour battery life
 - · Powered by (4) 1.5V AA batteries

For Universal Applications

HI98190 and HI98191 are IP67 rated waterproof meters designed for universal applications. HI98190 measures pH/ORP and temperature while HI98191 also includes ISE measurements.

Exchange out the pH probe for an ORP probe to obtain mV readings in the ± 2000 mV range. HI98191 adds direct ion concentration readings for ISEs with a choice of units for calibration and display.

Quick Connect Probe

The HI98190 features the HI12963 titanium bodied pH/temperature electrode with a quick connect DIN connector to make attaching and

removing the probe simple and easy. The HI98191 is supplied with the HI72911B titanium bodied pH/temperature electrode with BNC and RCA connectors.

ISE Sensors and Calibration

HI98191 has 17 different standard ISE sensors preprogrammed in the meter. Selecting the appropriate sensor will automatically update the ion charge for slope calibration and can be calibrated up to five points with the choice of seven standards and five custom standards (choice of units). This meter allows an extensive choice of measurement units (ppm, ppt, g/L, ppb, μ g/L, mg/mL, M, mol/L, mmol/L, % w/v, user) and has an expanded measuring range of 1.00×10^{-7} to 9.99×10^{10} .

Specifications

Specifications HI98190/HI98191 Range -2.0 to 20.0 pH; -2.00 to 20.00 pH; -2.000 to 20.000 pH Resolution 0.1 pH; 0.01 pH; 0.001 pH ±0.1 pH; ±0.01 pH; ±0.002 pH Accuracy рΗ up to five-point calibration, seven standard buffers available Calibration (1.68, 4.01, 6.86, 7.01, 9.18, 10.01, 12.45) and five custom buffers Temperature automatic or manual from -20.0 to 120.0 $^{\circ}$ C (-4.0 to 248.0 $^{\circ}$ F) Compensation +2000 mV Range Resolution $0.1 \, \text{mV}$ m٧ +0.2 mV Accuracy Relative mV Offset ±2000 mV Range from $1.00\,E^{-7}$ to $9.99\,E^{10}$ concentration Range ISE Resolution 3 digits 0.01; 0.1; 1; 10 concentration Accuracy $\pm 0.5\%$ of reading (monovalent ions), $\pm 1\%$ of reading (divalent ions) (HI98191 only) Calibration up to five point calibration, seven standard solutions available Range -20.0 to 120.0 °C (-4.0 to 248.0°F) 0.1°C (0.1°F) Resolution Temperature ±0.4°C (±0.8°F) (excluding probe error) Accuracy HI98190: HI12963 titanium body, pH electrode with internal temperature sensor, quick DIN connector and 1 m (3.3' cable) pH Probe HI98191: HI72911B titanium body, pH electrode with internal temperature sensor, BNC connector and 1 m (3.3' cable) Slope Calibration from 80 to 110% HI98190: 200 samples (100 each pH/mV range) Log-on-demand HI98191: 300 samples (100 each pH/mV/ISE range) Additional PC Connection opto-isolated USB with HI92000 software and micro USB cable Specifications Input Impedance 1.5V AA batteries (4) / approximately 200 hours of continuous use without Battery Type / Life backlight (50 hours with backlight) user selectable: 5, 10, 30, 60 min, disabled Auto-off Environment 0 to 50°C (32 to 122°F); RH 100% IP67 Dimensions / $185 \times 93 \times 35.2 \text{ mm} (7.3 \times 3.6 \times 1.4") / 400 \text{ g} (14.2 \text{ oz.})$ Weight

pH Calibration

Choose from seven standard pH buffers and five custom pH buffers to obtain up to five point calibration and achieve high precision readings with a pH accuracy of ± 0.002 and up to ± 0.001 pH resolution.

CAL Check™

Hanna's CAL Check™ maintains a history of past calibrations and monitors the pH electrode and buffers during subsequent calibrations for any signs of wide variances due to a dirty or broken electrode or contaminated pH buffers. During calibration, users are alerted to problems should they occur. After calibration, the electrode's overall condition is displayed as a percentage.

Data Logging

The log-on-demand feature allows users to store up to 200 samples (HI98190) or 300 samples (HI98191) that can be later transferred to a PC with the HI920015 USB cable and HI92000 software.

GLP and On-Screen Help

Comprehensive GLP data is directly accessible by pressing the GLP key; the contextual help menu can be accessed to obtain on-screen information and assistance at the touch of a button.



· Log-on-demand

· Store measurement data at the press of a button

On-screen Features



ISE measurements

The HI98191 includes ISE measurements when used with our wide selection of ISE electrodes or a custom version



Calibration

 pH calibration features detailed CAL Check™ messages. Users are guided through the calibration procedure with step-by-step on-screen instructions.



Salinity readings

- Salinity can be displayed as % NaCl, seawater scale (ppt) or practical salinity scale (PSU)
- Calibration
 - Perform up to a five point calibration for enhanced accuracy
- Temperature compensation
 - · Automatic Temperature Compensation
 - Configurable temperature coefficient range from 0.00 to 10.00%.°C
- Approximately 100 hour battery life
 - · Powered by (4) 1.5V AA batteries
- Four-ring platinum probe
 - This probe can cover low EC samples to 1000 mS/cm (actual EC)

For Universal Applications

HI98192 is a waterproof, portable conductivity meter that has an expanded conductivity range from 0.000 $\mu\text{S/cm}$ to 400 mS/cm, as well as TDS, resistivity and three salinity scales. This meter automatically recognizes the probe type (two or four ring) and allows the user to adjust the nominal cell constant. HI98192 is also ready to perform all three stages of USP <645> method required for EC measurement of ultrapure water.

Choose from seven memorized standards and obtain up to a five point conductivity calibration. For salinity (% range), HI7037 standard allows users to make a one point calibration.

EC and TDS measurements are fully customizable and include: cell constant selection between 0.010 and 10.000, selection of linear or natural water (non-linear) or no temperature compensation (for actual conductivity reading), configurable temperature compensation coefficient range from 0.00 to 10.00%/°C, choice of reference

Specifications

HI98192 0 to 400 mS/cm (shows values up to 1000 mS/cm), actual conductivity 1000 mS/cm**; 0.001 to 9.999 μS/cm*; 10.00 to 99.99 μS/cm; Range 100.0 to $999.9 \mu S/cm$; 1.000 to 9.999 m S/cm; 10.00 to 99.99 m S/cm; 100.0to 1000.0 mS/cm (autoranging) FC $0.001 \,\mu\text{S/cm}^*$; $0.01 \,\mu\text{S/cm}$; $0.1 \,\mu\text{S/cm}$; $0.001 \,m\text{S/cm}$; $0.01 \,m\text{S/cm}$; $0.1 \,m\text{S/cm}$ Resolution Accuracy $\pm 1\%$ of reading ($\pm 0.01 \,\mu\text{S/cm}$ or 1 digit, whichever is greater) automatic up to five points with seven memorized standards (0.00 μ S/cm, Calibration 84.0 μS/cm, 1.413 mS/cm, 5.00 mS/cm, 12.88 mS/cm, 80.0 mS/cm, 111.8 mS/cm) 0.00 to 99.99 mg/L (ppm); 100.0 to 999.9 mg/L (ppm); 1.000 to 9.999 g/L (ppt);Range 10.00 to 99.99 g/L (ppt); 100.0 to 400.0 g/L (ppt) (autoranging) TDS $0.01\,mg/L\,(ppm);\,0.1\,mg/L\,(ppm);\,0.001\,g/L\,(ppt);\,0.01\,g/L\,(ppt);\,0.1\,g/L\,(ppt)$ Resolution $\pm 1\%$ of reading (± 0.05 mg/L (ppm) or 1 digit, whichever is greater) Accuracy 1.0 to 99.9 Ω•cm; 100 to 999 Ω•cm; 1.00 to 9.99 KΩ•cm; 10.0 to 99.9 KΩ•cm; 100 to Range 999 K Ω •cm; 1.00 to 9.99 M Ω •cm; 10.0 to 100.0 M Ω •cm* (autoranging) Resistivity Resolution $0.1\,\Omega\bullet\text{cm}; 1\,\Omega\bullet\text{cm}; 0.01\,\text{K}\Omega\bullet\text{cm}; 0.1\,\text{K}\Omega\bullet\text{cm}; 1\,\text{K}\Omega\bullet\text{cm}; 0.01\,\text{M}\Omega\bullet\text{cm}; 0.1\,\text{M}\Omega\bullet\text{cm}^*$ $\pm 1\%$ of reading ($\pm 10 \Omega$ or 1 digit, whichever is greater) Accuracy % NaCI: 0.0 to 400.0%; practical salinity: 0.00 to 42.00 (PSU); Range seawater scale: 0.00 to 80.00 (ppt) Resolution 0.1%; 0.01 Salinity Accuracy ±1% of reading max. one point only in % range (with HI7037 standard); use conductivity Calibration calibration for all other ranges -20.0 to 120.0°C; -4.0 to 248.0°F Range 0.1°C; 0.1°F Resolution Temperature ±0.2°C; ±0.4°F (excluding probe error) Accuracy Calibration one or two points 0.010 to 10.000 Cell Constant Setup NoTC, linear (-20.0 to 120.0 °C (-4.0 to 248.0 °F)), non linear (0 to 36 °C (32 to Temperature 98.6°C)) ISO/DIS 7888 std Compensation Reference Temperature 15°C, 20°C and 25°C Temperature Coefficient 0.00 to 10.00 %/°C TDS Factor 0.40 to 1.00 HI763133 platinum, four ring conductivity/TDS probe with internal temperature Probe sensor and 1 m (3.3') cable (included) log-on-demand: 400 samples; lot logging: 5, 10, 30 sec, 1, 2, 5, 10, 15, 30, 60, Additional Logging 120, 180 min (max 1000 samples) Specifications Memorized Profiles up to 10 Measurement Modes autorange, autoend, lock and fixed range opto-isolated sealed USB (with HI92000 software and micro USB cable) PC Connectivity 1.5V AA batteries (4) / approximately 100 hours of continuous use Battery Type / Life (without backlight), 25 hours with backlight; Auto-off user selectable: 5, 10, 30, 60 min, disabled Environment 0 to 50°C (32 to 122°F); RH 100% IP67

 $185 \times 93 \times 35.2 \, \text{mm} (7.3 \times 3.6 \times 1.4^{\prime\prime}) / 400 \, \text{g} (14.2 \, \text{oz.})$

Data Logging

The HI98192's allows users to store up to 400

samples that can be later transferred to a PC with

the HI920015 USB cable and HI92000 software.

Comprehensive GLP data is directly accessible by

pressing the GLP key; the contextual help menu

can be accessed to obtain on-screen information

log-on-demand samples or 1000 lot logging

GLP and On-Screen Help

temperatures of 15°C, 20°C and 25°C, and a selectable TDS factor between 0.40 and 1.00.

Dimensions/Weight


Ten sets of customized measurement parameters can be stored as a user profile and later recalled.

Quick connect probe

The HI763133 four ring platinum conductivity probe features a quick connect DIN connector to make attaching and removing the probe simple and easy.

and assistance at the touch of a button. * The $0.000~\mu S/cm$ EC range and $0.1~M\Omega \cdot cm$ resistivity range are not available with the optional 4m cable probe **Uncompensated temperature reading


On-screen Features

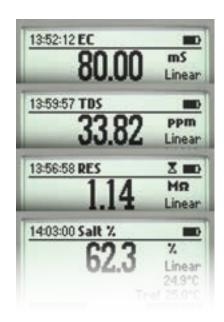

 EC, TDS, resistivity and salinity measurements in one meter



- Three stages of conformity
- Performs all 3 stages of USP <645> water quality testing requirements

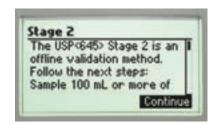


- · On-screen guide
 - Users are provided with on-screen instructions for each USP stage



- · Progress bar
 - Displays progress towards meeting stage 2 stability requirements



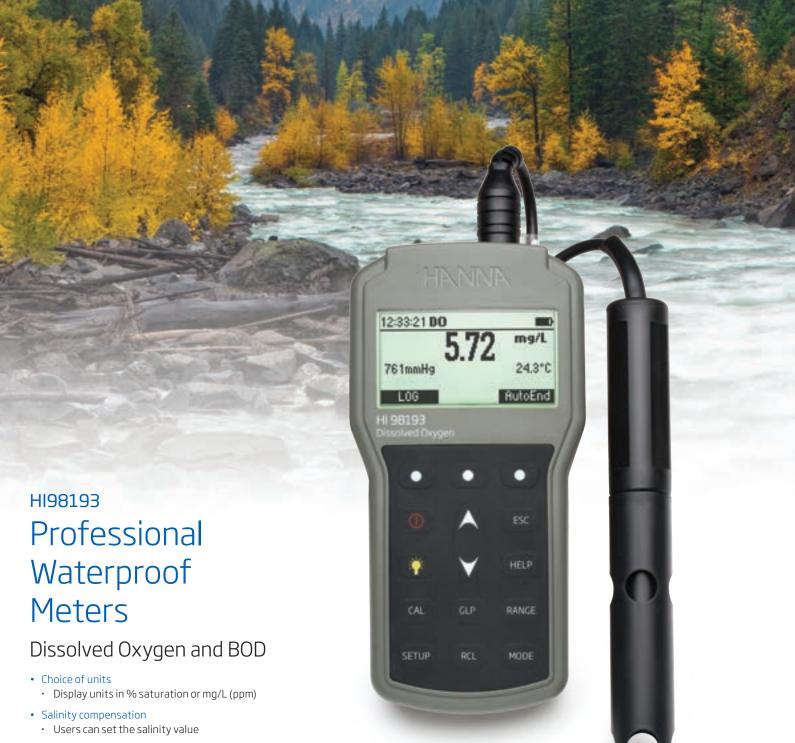

- Automatic pressure compensation
 - Built-in barometer with user-selectable units (mmHg, inHg, atm, psi, kPa, mbar)
- · Built-in calculations
 - Determination of Biochemical Oxygen Demand (BOD), Oxygen Uptake Rate (OUR) and Specific Oxygen Uptake Rate (SOUR)
- Polarization
 - · Automatic polarization of probe at startup
- Membrane caps
 - · Ready-to-use PTFE preformed membrane caps
- 200 hour battery life
 - · Approximately 200 hours of continuous use

For Universal Applications

The HI98193 portable dissolved oxygen meter has extended ranges of up to 50 ppm and 600% saturation. When measuring dissolved oxygen, compensations for salinity, temperature and pressure are essential to improve the accuracy and precision of readings.

Salinity compensation allows for direct determination of dissolved oxygen in saline waters. Temperature compensation is automatic with the probes built-in sensor, which features


a one or two-point calibration. Pressure compensation with the meter's built-in barometer can be validated against a reference barometer, and if needed, can be recalibrated in user-selectable units (mmHg, inHg, atm, psi, kPa, mbar). With the internal barometer, the HI98193 is able to compensate for changes in barometric pressure so there is no need for charts, altitude information or external barometric pressure information.

Other features include measurement, methods and calculations for BOD, OUR and SOUR.

Specifications

HI98193 0.00 to 50.00 mg/L (ppm); 0.0 to 600.0% saturationRange 0.01 mg/L (ppm); 0.1% saturation Resolution Accuracy (@25°C/77°F) ±1.5% of reading ±1 digit DO automatic one or two point at 100 % (8.26 mg/L) and 0 % Calibration (0 mg/L).; manual one point using a value entered by the user in % saturation or mg/L 450 to 850 mmHg Range Resolution 1 mmHa Atmospheric Accuracy (@25°C/77°F) Pressure \pm 3 mmHg within \pm 15% from the calibration point Calibration one point at any in range pressure value -20.0 to 120.0°C; -4.0 to 248.0°F Range Resolution Temperature Accuracy (@25°C/77°F) ±0.2°C; ±0.4°F (excluding probe error) Calibration one or two point at any in range temperature value direct DO; BOD (biochemical oxygen demand); OUR (oxygen Measurement Modes uptake rate); SOUR (specific oxygen uptake rate) automatic from 450 to 850 mmHg Barometric Compensation Salinity Compensation automatic from 0 to 70 g/L automatic from 0.0 to 50.0 °C (32.0 to 122.0 °F) Temperature Compensation HI764073 polarographic DO probe with protective sleeve, Probe internal temperature sensor, DIN connector and 4m (13') cable Additional log-on-demand up to 400 samples Specifications Logging opto-isolated USB (with HI92000 software) PC Connectivity 1.5V (4) AA batteries / approximately 200 hours of continuous Battery Type / Life use without backlight (50 hours with backlight) Auto-off user-selectable: 5, 10, 30, 60 min or can be disabled Environment 0 to 50°C (32 to 122°F); RH 100% IP67 Dimensions 185 x 93 x 35.2 mm (7.3 x 3.6 x 1.4") Weight 400 g (14.2 oz.)

 Automatic barometric pressure compensation

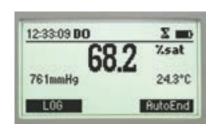

 Results in mg/L (ppm) or % saturation

Quick connect probe

The HI764073 polarographic dissolved oxygen probe features a quick connect DIN connector to make attaching and removing the probe simple and easy.

Data Logging

The HI98193's log-on-demand features allows users to store up to 400 samples that can be later transferred to a PC with the HI920015 USB cable and HI92000 software.

GLP and On-Screen Help


Comprehensive GLP data is directly accessible by pressing the GLP key; the contextual help menu can be accessed to obtain on-screen information and assistance at the touch of a button.

On-screen Features



BOD results

 BOD is calculated in mg per liter from the difference between the initial and final dissolved oxygen concentration readings.

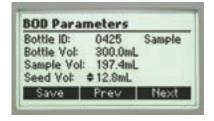


· BOD parameters and records

- All necessary parameters for BOD testing can be set and displayed at once.
- A list of all saved BOD data can be easily retrieved and shown on the LCD display.



OUR results

 Measured in mg of oxygen consumed per L per hour.

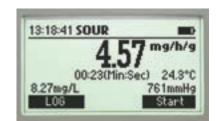

SOUR results

 Measured in mg of oxygen consumed per g of volatile suspended solids per hour.

Ordering Information





HI98190 includes:



HI12963 titanium body, pH electrode with internal temperature sensor, quick DIN connector and 1 m (3.3' cable)



HI7004M pH 4.01 buffer solution (230 mL)



HI7007M pH 7.01 buffer solution (230 mL)



electrode general cleaning solution sachet (2)

HI98191 includes:



HI72911B titanium body, pH electrode with internal temperature sensor, BNC connector and 1 m (3.3' cable)



HI7662 temperature probe (for use with optional ISE's)



HI7004M pH 4.01 buffer solution (230 mL)



HI7007M pH 7.01 buffer solution (230 mL)



electrode general cleaning solution sachet (2)

All meters are also supplied with:



rugged carrying case with custom thermoformed insert



100 mL plastic beaker (2)



quality certificate



HI92000 PC software





HI920015 micro USB cable



1.5V AA batteries (4)



instruction manual



quick start guide







HI98192 includes:



HI763133 platinum, four ring conductivity/ TDS probe with internal temperature sensor and 1 m (3.3') cable



 $\begin{array}{l} HI7031M\,1413 \\ \mu S/cm\, calibration \\ solution\, (230\,mL) \end{array}$



HI7035M 111.8 mS/cm calibration solution (230 mL

HI98193 includes:



HI764073 polarographic DO probe with protective sleeve, internal temperature sensor, DIN connector and 4m (13') cable



HI7040 bi-component zero oxygen solution (230 mL + 30 mL)



HI7041S electrolyte solution (30 mL)



preformed PTFE membrane caps (2)



DO protective cap



O-rings (2)





We Design, Manufacture, Supply and Support All of Our Products.

When you buy a Hanna product, you're not only buying the best value for your money, but you're also receiving the benefit of Hanna's unsurpassed customer service and post-sale technical support.

With 60 offices in over 40 countries, Hanna dedicates itself to be a worldwide leader in service and selection.

Offering research grade quality at competitive prices, every Hanna office strives to work with each customer to develop a solution tailored to their needs, and within their budget.

