

Quick Start

Thank you for choosing a quality In-Situ product. For best results, please take a moment to read over this material. For further reference, the complete miniTROLL Operator's Manual and Win-Situ 4.0 User's Guide are included on the Win-Situ 4 CD-ROM.

1 Connect the cable



2 Install the software

Install Win-Situ 4 from the CD to your **desktop** or **laptop PC**.
Or, install Pocket-Situ on a PDA following the installation instructions on the CD.

3 Connect to a desktop / laptop PC or PDA



Connect the communication interface between the miniTROLL's Quick-Connect cable and the computer

4 Launch the software

Double-click the desktop shortcut , or tap Pocket-Situ on the PDA Start Menu. First-time users: click **Next** through 4 screens of the Connection Wizard to set up the COM port.

5 Connect to the miniTROLL

A Highlight the **COM** port
B Click or tap **Find**

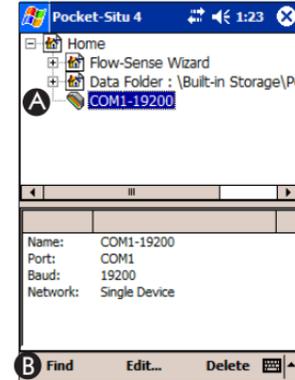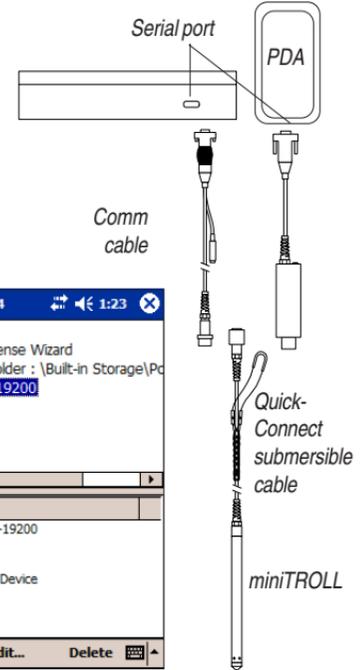

6 Set the miniTROLL clock

- A Select the miniTROLL
- B Select **Edit...**
- C Select **Clock** option
- D Follow the Wizard to synchronize with the PC clock

**1 800 4INSITU**(toll-free, US and Canada) **www.in-situ.com****7 Set up the Pressure channel**

- A Select **Pressure** in the Navigation tree
- B Select **Edit...**
- C Follow the steps in the Wizard. Many options are available; consult the miniTROLL operator's Manual on the Win-Situ installation CD for complete information

8 Set up a test to log data

- A Select **Tests** in the Navigation tree
- B Select **Add...**
- C Follow the steps in the Wizard. When finished, the test will be added to the Navigation tree

To start, stop, view, download, and delete the test

- A Select the test in the Navigation tree
- B Select the action button

